


MASKJET

SITE READINESS DOCUMENT

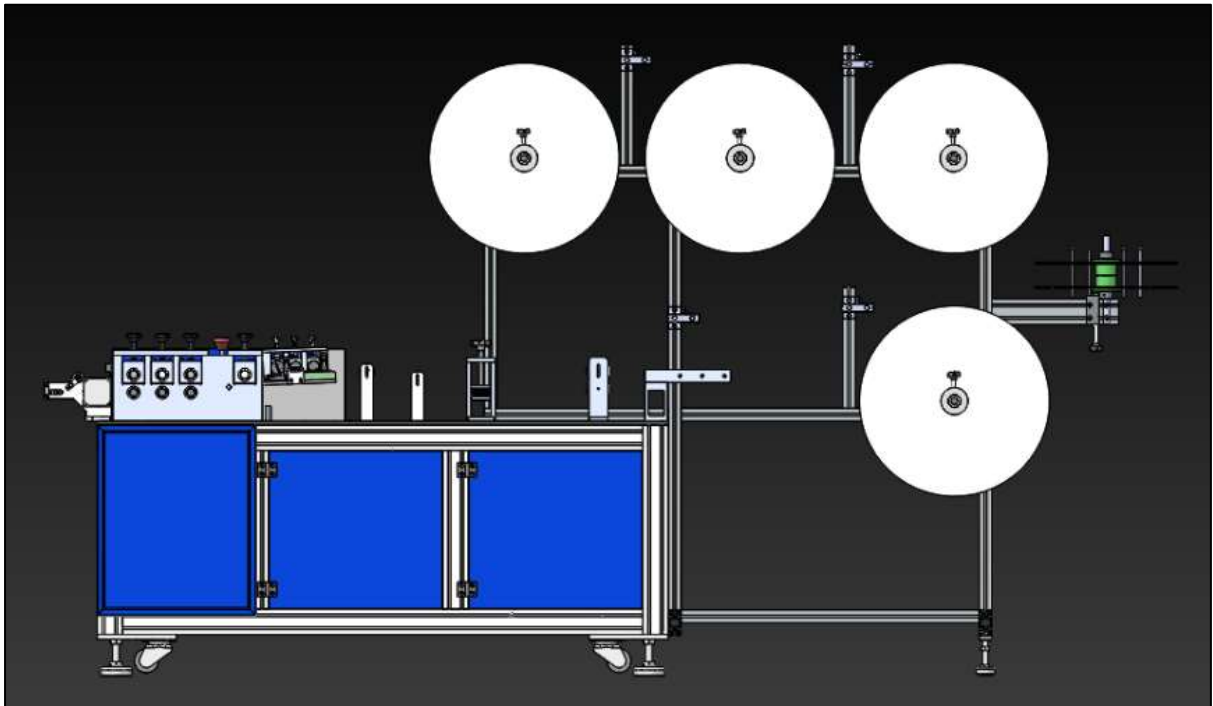

Prerequisites for MASKJET:

Contents:

1. Power Supply
2. Air Pressure
3. Environment
4. Floor & Space

Stabilized Power Requirements:

- Total Power Consumption is 6KW
 - For Mask unit 3.5KW/unit
 - For Ear loop unit 2.5KW/unit
- Uninterrupted Power supply of 220V, 50Hz.
- **Exclusive Earthing:** It should not be shared with UPS and Building's common Earthing

Air Pressure

Air pressure requirements 7 bar

Environment Requirements

- Room temperature should be maintained in the range of 18 - 28 Degree Celsius with humidity 35 - 80% RH.
- Room must be closed and dust-free for the machine.
Note: Highly cleaned and hygiene room.
- There should not be air draught in the room.

Floor & Space

- **Machine Dimensions** : 3571mm x 922mm x 1986mm (LxWxH)
- **Room Dimension** : 4571mm (L) X 1922mm (W) X 3000mm (H)
- **Machine Net Weight** : ~360kg
- **Machine Gross weight** : ~420kg

Site Layout of MASKJET

